



Thank you for purchasing Pier of d'Nort. This guide will help you install and secure your **Fascia Mount Bolt** safely and effectively. Inside, you'll find step-by-step instructions, diagrams, and important safety information. Please read everything before beginning installation to ensure stability, durability, and long-lasting enjoyment of your pier.

Important Warranty Disclaimer

Use only the components provided with your pier. Any modification or use of non-approved parts may compromise stability and safety and will void the warranty. Improper installation, handling, or use may result in structural failure, personal injury, or property damage.

DANGER	DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury
WARNING	WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury
CAUTION	CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury
NOTICE	NOTICE is used to address practices not related to physical injury

NOTICE	It's important to keep the drill bit as straight as possible.
CAUTION	Always wear eye protection and maintain firm control of the drill when drilling through the mount. Failure to do so may result in injury or damage.


Instructions:

Adding Fascia Mount Bolt to Older Mount

PARTS INCLUDED:

Description	Qty
1/4"x 2-1/2" Bolts	2
Round Spacers	2
1/4" Acorn Nuts	2


TOOLS: 7/16" Wrench (Not Included)
 1/4" Drill Bit (Not Included)
 Drill
 Tape Measure

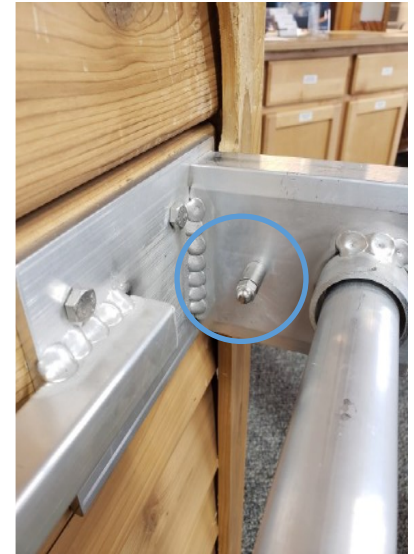

DRILLING

STEP 1: To find the correct drill point for each side, measure 3-7/8" from the end of the mount and 2-5/16" from the top or bottom of the mount (**picture A**) and put a mark.

STEP 2: Drill a 1/4" hole all the way through the mount.

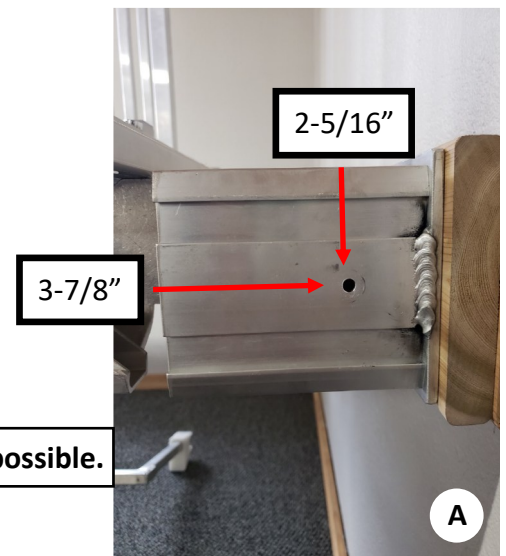

NOTICE

It's important to keep the drill bit as straight as possible.

CAUTION

Always wear eye protection and maintain firm control of the drill when drilling through the mount. Failure to do so may result in injury or damage.

ATTACHING THE BOLT WITH SPACER

STEP 3: On each side, insert the bolt from the outside with the threads on the inside (**picture B**). Slide on the spacer over the threads (**picture C**). Thread on the nut and tighten.

