



Thank you for purchasing Pier of d’Nort. This guide will help you install and secure your **Footrest** safely and effectively. Inside, you’ll find step-by-step instructions, diagrams, and important safety information. Please read everything before beginning installation to ensure stability, durability, and long-lasting enjoyment of your pier.

Important Warranty Disclaimer

Use only the components provided with your pier. Any modification or use of non-approved parts may compromise stability and safety and will void the warranty. Improper installation, handling, or use may result in structural failure, personal injury, or property damage.

DANGER	DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury
WARNING	WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury
CAUTION	CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury
NOTICE	NOTICE is used to address practices not related to physical injury

CAUTION Always wear eye protection and maintain firm control of the drill when drilling through the mount. Failure to do so may result in injury or damage.

WARNING The footrest is NOT intended for standing, jumping, diving, or anything else other than resting your feet while sitting on the chair. Failure to follow can result in serious injury or damage.

Instructions:

Footrest

PARTS INCLUDED:

Description	Qty
Footrest	1
5/16" Bolt	1
Washer	1
5/16" Nut	1
T Bolt	1
Acorn Nut	1

TOOLS: (1) 9/16" Wrench (Not Included)
 (2) 1/2" Wrench (Not Included)
 5/16" Drill Bit (Not Included)
 Grip Clamp (Not Included)



Before Starting

If you purchased a chair and mount prior to 2023, the mount will not have predrilled holes. If purchased after 2023, only follow STEPS 4 and 6.

DRILLING HOLES INTO CHAIR MOUNT


STEP 1: Position the back of the footrest channel against the bottom of the chair mount pole. The bottom ends of both should be flush with each other (**picture A**). Use a clamp to hold the footrest in place.

STEP 2: Look at the two outside ends of the footrest by the panel and position them so they are equal distances apart (**picture B**). Reset the clamp if needed.




STEP 3: Using a drill and a 5/16" drill bit, drill the bottom hole on the footrest first. Use the footrest hole as a template and only drill through the first part of the tube (**picture C**). Don't drill all the way through to the other side of the tube as it's unnecessary.

⚠ CAUTION Always wear eye protection and maintain firm control of the drill when drilling through the mount. Failure to do so may result in injury or damage.

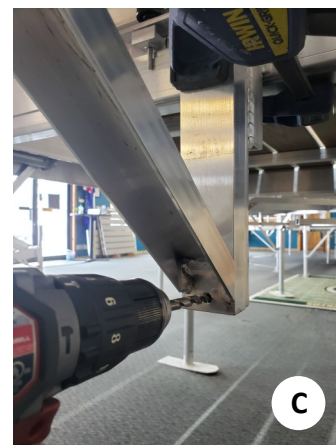


STEP 4: With the holes lined up on the footrest and mount, on the bottom hole insert the T BOLT from the inside of the mount tube, threads facing out. To ensure that enough of the bolt thread is exposed, the head of the T BOLT should be positioned vertically (**picture D**). Attach the acorn nut and tighten using the 9/16" wrench.

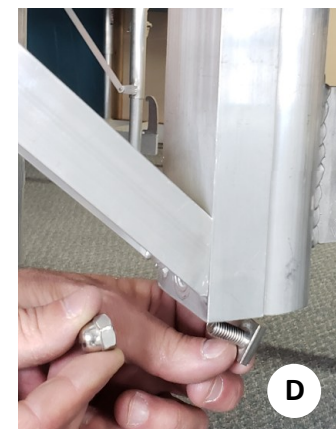

STEP 5: While keeping the drill level and straight, drill the top hole, using the hole in the footrest as a template. Drill all the way through both sides of the chair mount (**picture E**).



STEP 6: Slip the flat washer over the 2-3/4" bolt and insert it into the top hole (**picture F**). Attach the lock nut and tighten with two 1/2" wrenches. Make sure the footrest is secure and it's complete.

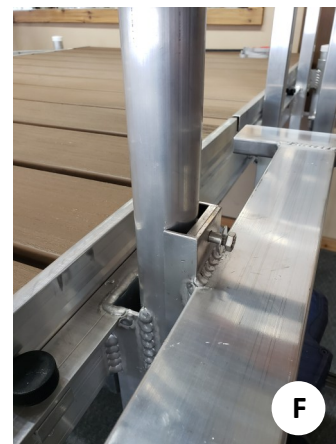

⚠ WARNING The footrest is NOT intended for standing, jumping, diving, or anything else other than resting your feet while sitting on the chair. Failure to follow can result in serious injury or damage.