



Thank you for purchasing Pier of d’Nort. This guide will help you install and secure your **Vertical Mount** safely and effectively. Inside, you’ll find step-by-step instructions, diagrams, and important safety information. Please read everything before beginning installation to ensure stability, durability, and long-lasting enjoyment of your pier.

Important Warranty Disclaimer

Use only the components provided with your pier. Any modification or use of non-approved parts may compromise stability and safety and will void the warranty. Improper installation, handling, or use may result in structural failure, personal injury, or property damage.

 DANGER	DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury
 WARNING	WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury
 CAUTION	CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury
NOTICE	NOTICE is used to address practices not related to physical injury

NOTICE	The two Lynch Pins attached to the pier mount won’t be used in this application.

Instructions:

Vertical Pier Mount

PARTS INCLUDED:

Description	Qty
Vertical Mount	1
Lynch Pins	2
1 Board Panel	1

TOOLS: Drill (Not Included)
 (8) 5/16" Lag Bolts 1.5" Long (Not Included)
 (8) 1/2" Lag Screw Expansion Shields
 (Concrete Anchors) (Not Included)




Before Starting


Make sure there's a nice flat vertical surface and that the surface is angled the same way you want your pier facing, both horizontally and vertically. If not, there will be some pre-work to get that corrected.

POSITIONING THE VERTICAL MOUNT

STEP 1: Align the top of the plates with the holes drilled and back surface of the pier mount so that it is 3/4" from the top of the surface. Once the panel is on, it will add 1/4", making it a flat transition. If you aren't sure, put the panel on top of the pier mount when leveling.

STEP 2: Mark all (8) holes on the plate.

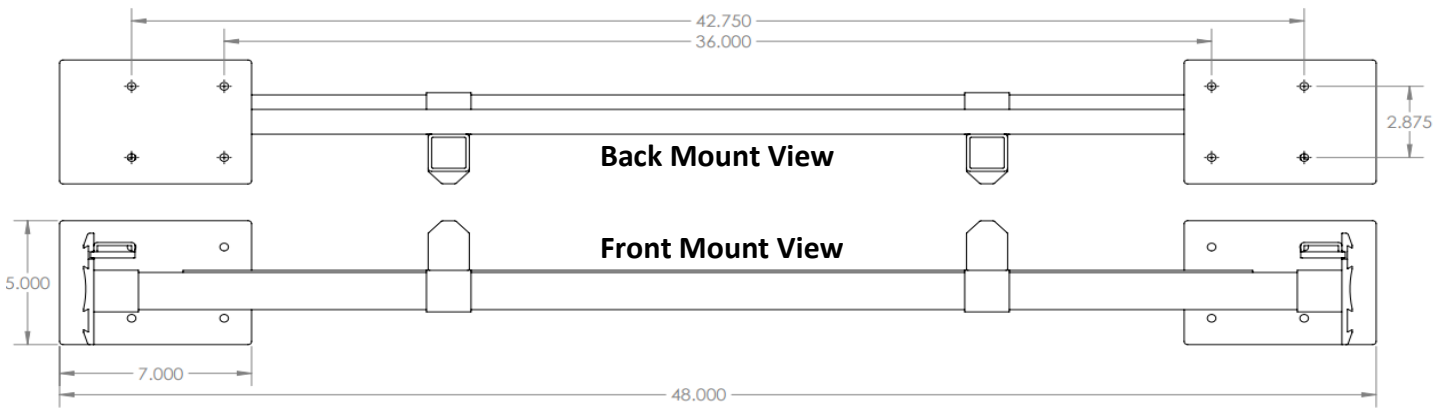


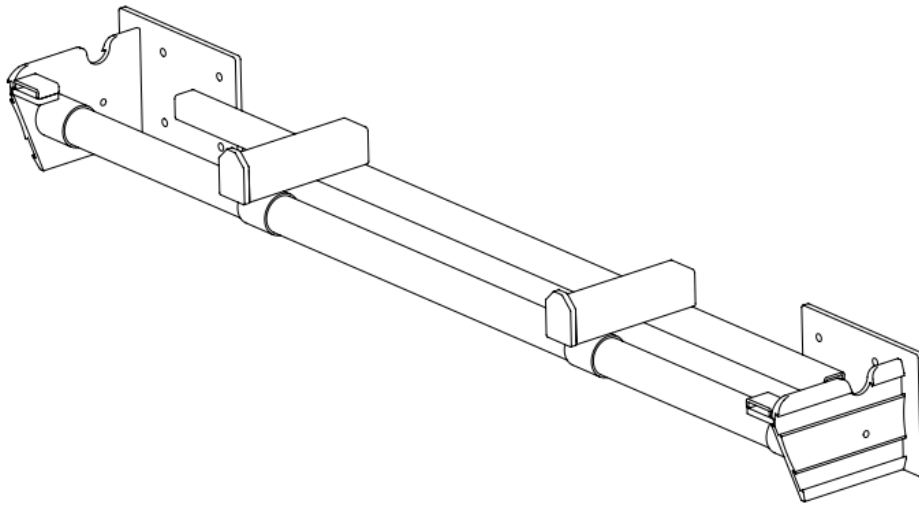

DRILLING AND SECURING THE MOUNT

STEP 3: After marking, remove the pier mount and drill 1/4" holes for wood and 1/2" holes in concrete for the concrete anchors.

STEP 4: Hold up the pier mount, align the drilled holes, and drive in the bolts.

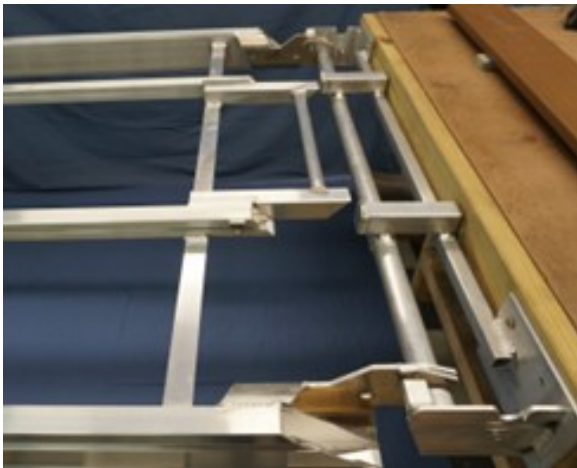

NOTICE

The two Lynch Pins attached to the pier mount won't be used in this application.