



Thank you for purchasing Pier of d'Nort. This guide will help you install and secure your **Chair and Mount** safely and effectively. Inside, you'll find step-by-step instructions, diagrams, and important safety information. Please read everything before beginning installation to ensure stability, durability, and long-lasting enjoyment of your pier.

Important Warranty Disclaimer

Use only the components provided with your pier. Any modification or use of non-approved parts may compromise stability and safety and will void the warranty. Improper installation, handling, or use may result in structural failure, personal injury, or property damage.

DANGER	DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury
WARNING	WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury
CAUTION	CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury
NOTICE	NOTICE is used to address practices not related to physical injury

NOTICE

The chair can attach along any side of the pier section, however if you wish to attach the chair to an end section, you must have a structural plating welded to the end of your frame (marked with an S on your layout diagram). If you are unsure of what you have, please check with us.

CAUTION

The gripper must be in the track correctly. Failure could cause injury or damage.

WARNING

The chair support braces must be use!

Instructions:

CHAIR AND MOUNT

PARTS INCLUDED:

Description	Qty
Chair	1
Chair Mount	1
Support Brace	1

TOOLS: 5/32" Allen Wrench (Included)
(2) 7/16" Wrench (Not Included)



Before Starting




The mount will be separated from the chair for packing purposes. Once the chair is inserted into the mount, it is not removable.


NOTICE

The chair can attach along any side of the pier section, however if you wish to attach the chair to an end section, you must have a structural plating welded to the end of your frame (marked with an S on your layout diagram). If you are unsure of what you have, please check with us.

WHAT PART OF THE PIER ARE YOU ATTACHING TO?

- A. SIDE OF THE FRAME:** Clamps will attach to the bottom of the square frame runner. (picture A)
- B. STRUCTURAL END OF THE PIER SECTION:** Clamps will attach to the top of the triangle. (picture B)
- C. PATIO SECTION:** Clamp will attach to the bottom of the 1.5" square tube material. (picture C)

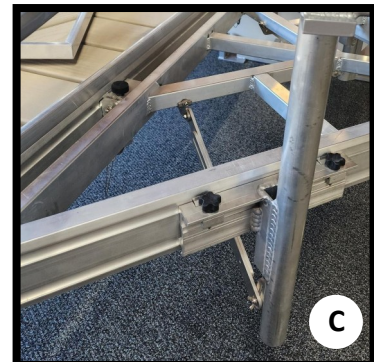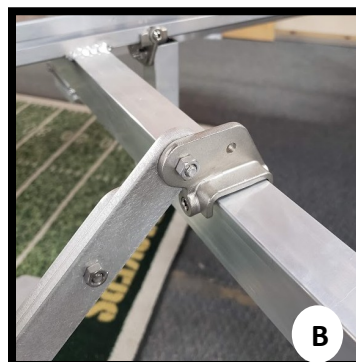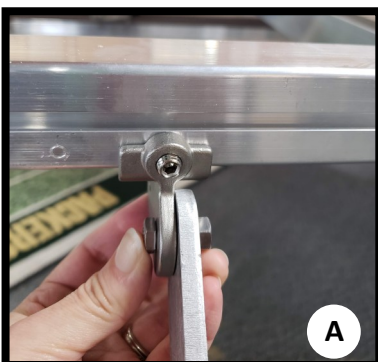

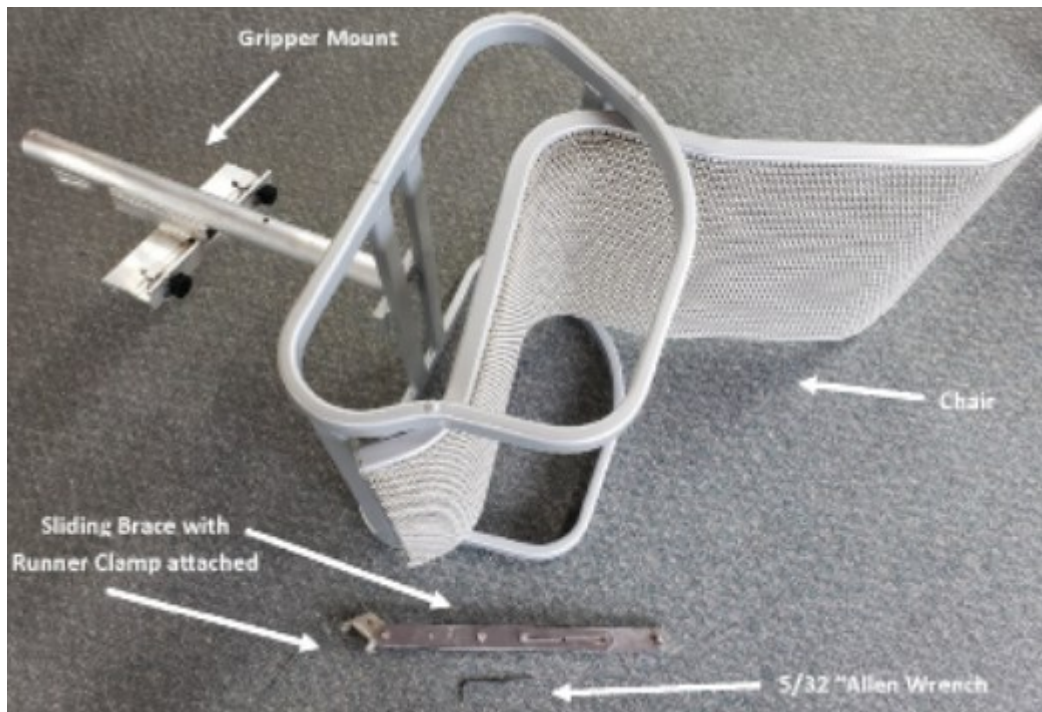

POSITION & INSTALL THE CHAIR GRIPPERS

STEP 1: Set the chair in the desired location on the pier, fit the gripper mount into the track and tighten.

⚠ CAUTION The gripper must be in the track correctly! Failure could cause injury or damage.

Correct



Incorrect



PREPARE THE CHAIR BRACE AND RUNNER CLAMP

STEP 2: Pull back the decking to expose the frame runner.

STEP 3: Unthread the Allen head bolts on the runner clamp to the point where they are not sticking through to the inside of the clamp.

STEP 4: Loosen the brace nuts, but do not remove the nuts.

STEP 5: Completely remove the wing nut and bolt from the of the brace. (opposite from the runner clamp)

STEP 6: Line up the bottom of the brace to the tab located at the bottom of the mount.

STEP 7: Re-insert the bolt and wing nut that was removed and leave it loose for adjustments.

STEP 8: On the opposite side of the brace, attach the runner clamp to either the square tube or triangle and tighten the set screws. (see instruction above to know)

STEP 9: Adjust the bolts and nuts in the middle to lengthen, if needed.

STEP 10: Once everything is in place properly and aligned, tighten all bolts.

⚠ WARNING The chair support braces must be used!

